



LIST OF PARTS

1 Frame *	29 Safety - Left *
2 Slide Stop *	30 Safety Detent Plunger - Left
3 Slide Stop Spring	31 Safety Detent Plunger Spring *
4 Slide Stop Spring Pin	32 Magazine Catch
5 Trigger *	33 Magazine Catch Spring
6 Trigger Pin	34 Trigger Bar Spring
7 Trigger Bar	35 Magazine Catch Spring Screw
8 Trigger Spring	36 Magazine *
9 Pin (3x)	37 Firing Pin *
10 Ejector	38 Firing Pin Spring
11 Sear	39 Firing Pin Stop *
12 Sear Spring	40 Buffer *
13 Sear Pin	41 Recoil Spring *
14 Safety - Right *	42 Recoil Spring Guide *
15 Safety Detent Plunger - Right *	43 Barrel *
16 Hammer *	44 Slide *
17 Disconnecter	45 Front Sight
18 Hammer Pin	46 Front Sight Pin
19 Hammer Pin Retaining Peg	47 Loaded Chamber Indicator *
20 Main Spring Strut *	48 Loaded Chamber Indicator Spring *
21 Main Spring	49 Loaded Chamber Indicator Nut *
22 Main Spring Plug *	50 Extractor *
23 Main Spring Plug Pin	51 Extractor Pin
24 Magazine Guide *	52 Extractor Spring
25 Magazine Guide Pin	53 Rear Sight *
26 Grip Panel - Left *	54 Securing Screw (2x) *
27 Grip Panel - Right *	55 Trigger Screw *
28 Grip Panel Screw (2x) *	56 Shaped Washer (2x) *

Comments:

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.